
GB-117 Seed-spacing template

01 / OVERALL GEOMETRY | G1 | INCHES | NOT TO SCALE

TOP / X-Y DATUM

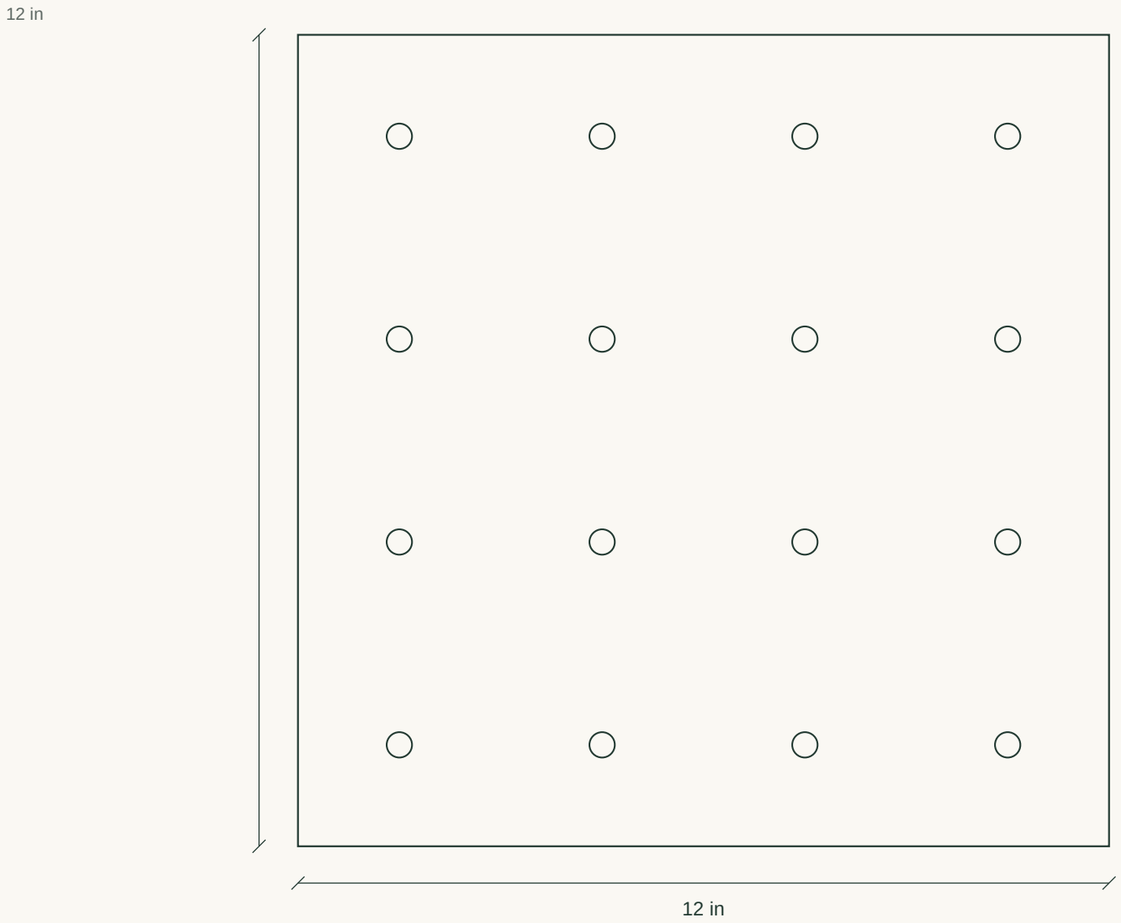

FRONT / X-Z



SIDE / Y-Z



READ THE DIMENSIONS, NOT THE DISPLAY SCALE

Views are original wireframe projections. Hidden edges may remain visible; schematic lines are not cutting paths. Stock is actual-size reference geometry, not a nominal lumber label.

No load capacity, field performance or code compliance is established by these drawings. Read the project-specific limits in the guide.

SPECIFICATION

Revision: G1

Model units: inches

Drawing scale: not to scale

Publication: released 2026-10-11

GB-117 Seed-spacing template

02 / PARTS AND CRITICAL DETAILS | G1 | INCHES | NOT TO SCALE

PART / CUT SCHEDULE

PART	QTY	FINISHED SIZE (IN)	STOCK / MATERIAL
T	1	12 x 12 x 0.22	untreated sanded plywood; measured thickness


FASTENER / HARDWARE SCHEDULE

None. This project has no screw or connector assembly.


FIT AND CONNECTION NOTES

1. Sixteen holes: all pairings of x/y = 1.5, 4.5, 7.5, 10.5.
2. Hole diameter 0.375; model units inches; no metric prototype dimensions reused.
3. Board repeat 12 gives 3-inch spacing between 10.5 and 13.5.
4. Optional selected pattern uses 1.5 and 7.5 only; confirm crop requirements.
5. Dimensioned plan is not a full-size letter-paper tracing template.

DRILL CENTERS / DIAMETER 0.375

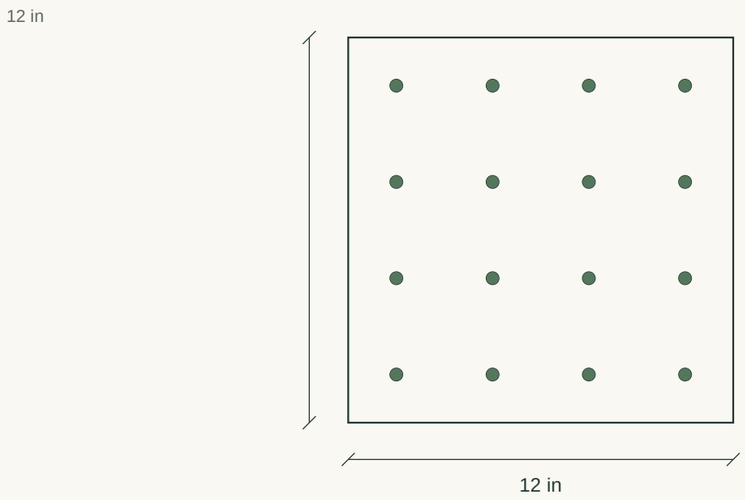

REPEAT / 10.5 TO 13.5 IS THREE INCHES

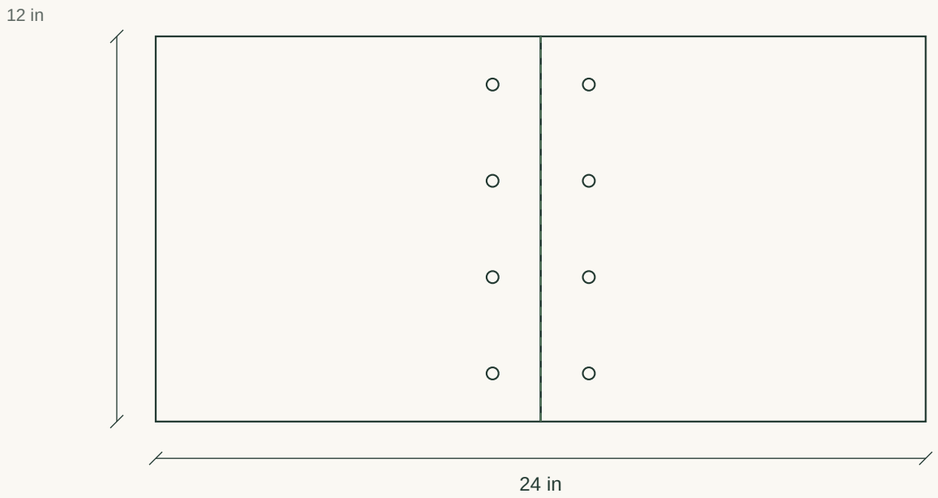


Green dots are screw or center locations, not head-size or strength claims. Consult the exact part datum and pilot instructions in the guide.

GB-117 Seed-spacing template


03 / ASSEMBLY STUDIES AND INSPECTION | G1 | INCHES | NOT TO SCALE

01




Cut the square and establish one datum corner

02

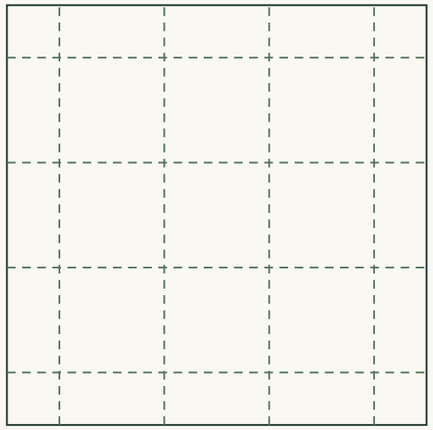

Mark all sixteen centers from the datum edges

03

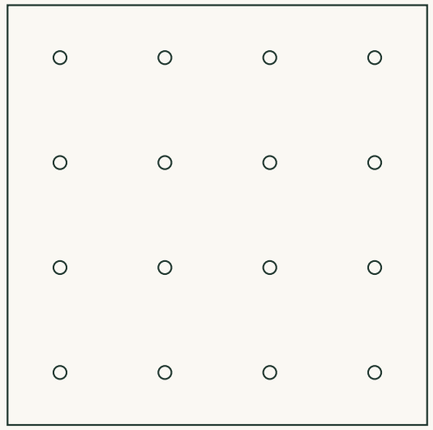

Drill, smooth and verify the repeated pattern

ORIGINAL SCHEMATIC ASSEMBLY VIEWS - NOT REAL-WORK PHOTOGRAPHS

These studies explain part relationships only. They omit clamps, operators and some fasteners; a floating intermediate assembly is not an instruction to work without support. Use the numbered guide steps for safe workholding, pilots, assembly order and stop conditions.

BEFORE THE NEXT STEP

Sixteen holes: all pairings of x/y = 1.5, 4.5, 7.5, 10.5. Hole diameter 0.375; model units inches; no metric prototype dimensions reused. Board repeat 12 gives 3-inch spacing between 10.5 and 13.5. Optional selected pattern uses 1.5 and 7.5 only; confirm crop requirements. Dimensioned plan is not a full-size letter-paper tracing template. Inspect the first actual joint or cut before repeating it. Recheck the drawings before cutting if you change any dimension.

Released without a prototype build: no physical trial, load test or supplier price check has been made.