

GB-084 Portable garden tool caddy

01 / OVERALL GEOMETRY | G1 | INCHES | NOT TO SCALE


TOP / X-Y DATUM

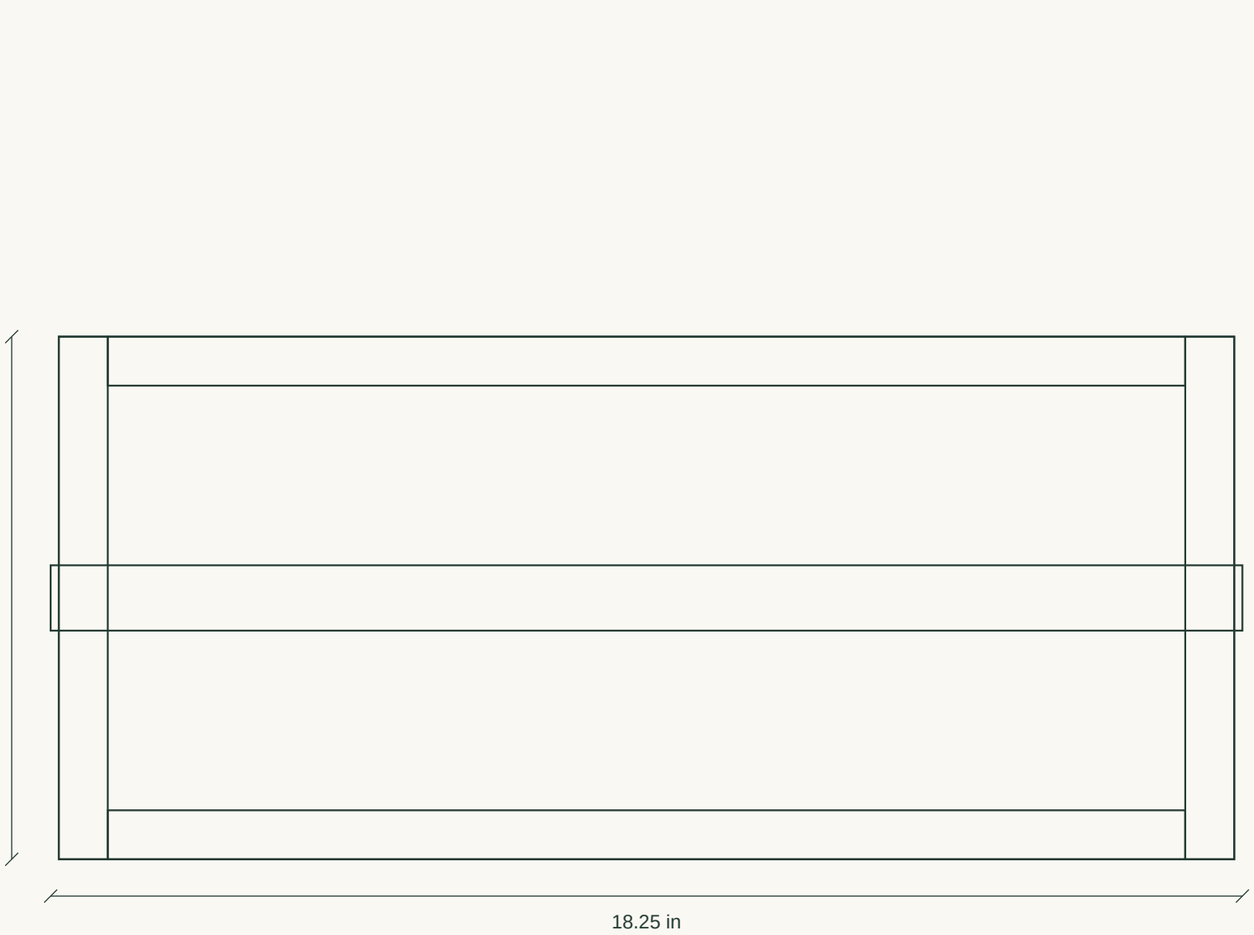

FRONT / X-Z

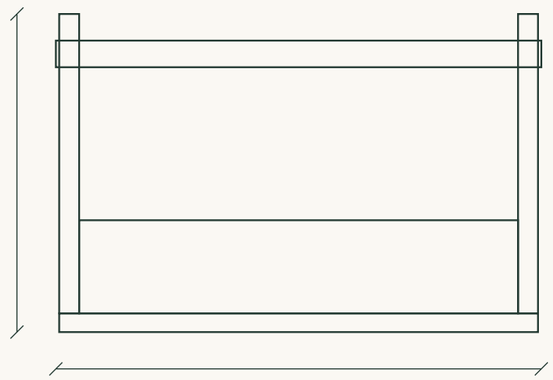

SIDE / Y-Z

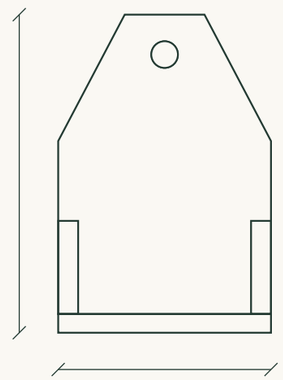

READ THE DIMENSIONS, NOT THE DISPLAY SCALE

Views are original wireframe projections. Hidden edges may remain visible; schematic lines are not cutting paths. Stock is actual-size reference geometry, not a nominal lumber label.

Body length 18; dowel projects 0.125 at each end. Overall length 18.25 includes the projections. End-board local height datum starts on top of the floor.

SPECIFICATION

Revision: G1

Model units: inches

Drawing scale: not to scale

Publication: released 2026-10-11

GB-084 Portable garden tool caddy

02 / PARTS AND CRITICAL DETAILS | G1 | INCHES | NOT TO SCALE

PART / CUT SCHEDULE

PART	QTY	FINISHED SIZE (IN)	STOCK / MATERIAL
B	1	18 x 8 x 0.703	Exterior-bond plywood; measured thickness
E	2	8 x 11.25 x 0.75	1x10 ripped to 8, then gabled
S	2	16.5 x 3.5 x 0.75	1x4
H	1	18.25 long; DIA 1	round hardwood dowel; diameter 1

FASTENER / HARDWARE SCHEDULE


F1 | Qty 20 | #8 x 1-1/2 Type 316 stainless flat-head wood screw; 8 body + 12 floor

F2 | Qty 2 | #6 x 1-1/2 Type 316 stainless flat-head wood screw; vertical dowel retainer


FIT AND CONNECTION NOTES

1. Body datum at its lower-left corner; handle extends 0.125 beyond each end.
2. End gables: shoulders at height 6.5; top spans width coordinates 2.5 to 5.5.
3. Handle bore diameter 1; center width 4, height 9.75 above end bottom.
4. Body screws: end-face edge lines 0.375; heights 1 and 2.5. Floor: 12 screws.
5. Two vertical #6 retainers pass through 1-inch upper web and 0.5 into dowel.

GABLED END / BORE AND RETAINING AXIS

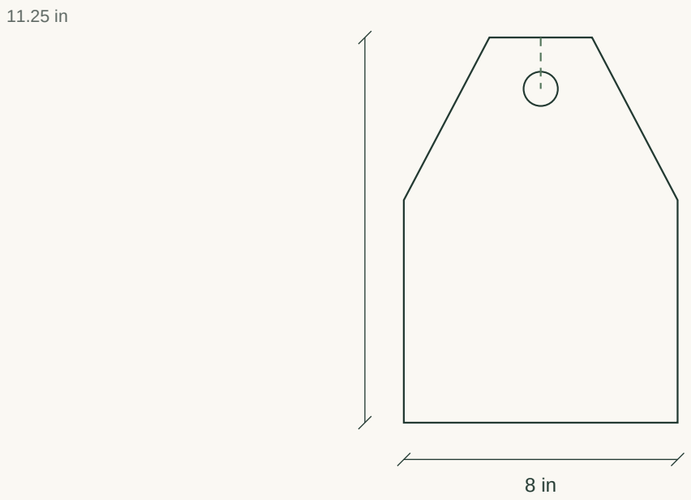

FLOOR / TWELVE UPWARD CONNECTIONS

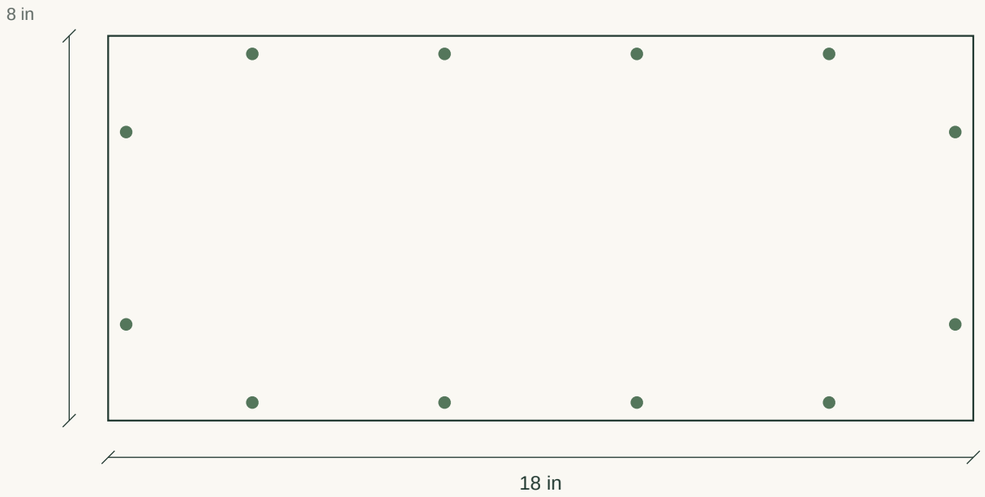


Green dots are screw or center locations, not head-size or strength claims. Consult the exact part datum and pilot instructions in the guide.

GB-084 Portable garden tool caddy


03 / ASSEMBLY STUDIES AND INSPECTION | G1 | INCHES | NOT TO SCALE

01

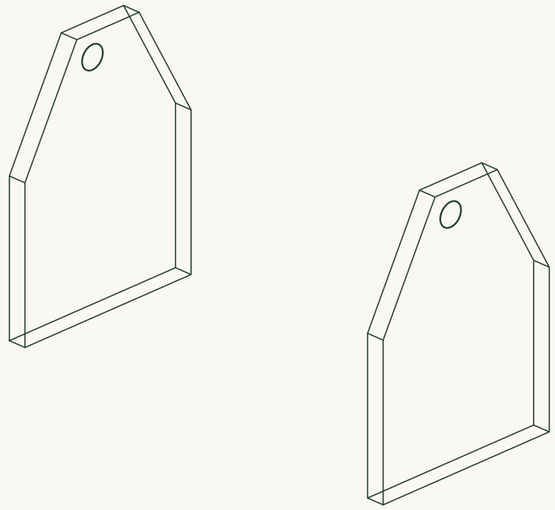


Shape two matching gabled ends and bores

02

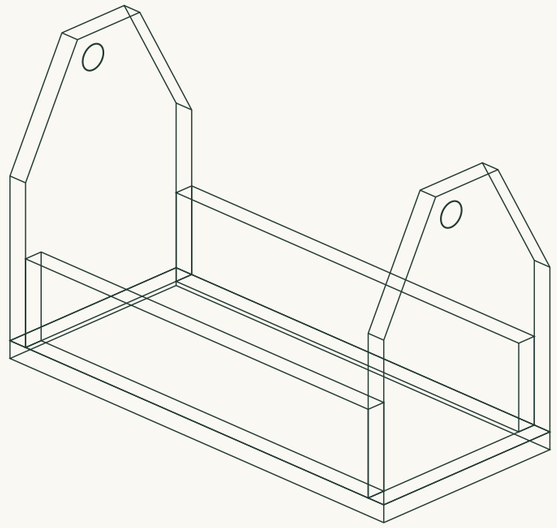

Join sides and attach the floor

03

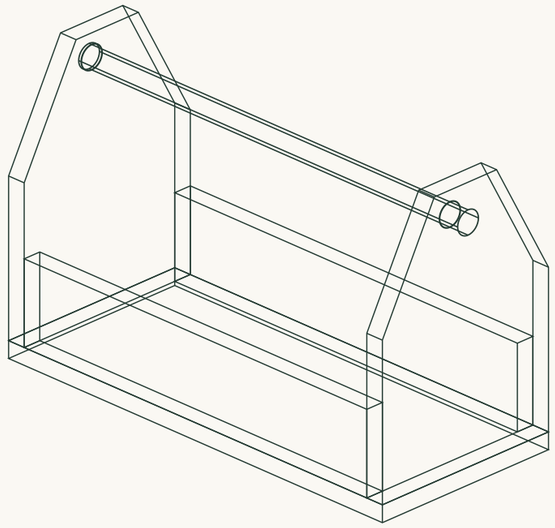

Fit the dowel and two retaining screws

ORIGINAL SCHEMATIC ASSEMBLY VIEWS - NOT REAL-WORK PHOTOGRAPHS

These studies explain part relationships only. They omit clamps, operators and some fasteners; a floating intermediate assembly is not an instruction to work without support. Use the numbered guide steps for safe workholding, pilots, assembly order and stop conditions.

BEFORE THE NEXT STEP

Body datum at its lower-left corner; handle extends 0.125 beyond each end. End gables: shoulders at height 6.5; top spans width coordinates 2.5 to 5.5. Handle bore diameter 1; center width 4, height 9.75 above end bottom. Body screws: end-face edge lines 0.375; heights 1 and 2.5. Floor: 12 screws. Two vertical #6 retainers pass through 1-inch upper web and 0.5 into dowel. Inspect the first actual joint or cut before repeating it. Recheck the drawings before cutting if you change any dimension.

Released without a prototype build: no physical trial, load test or supplier price check has been made.